


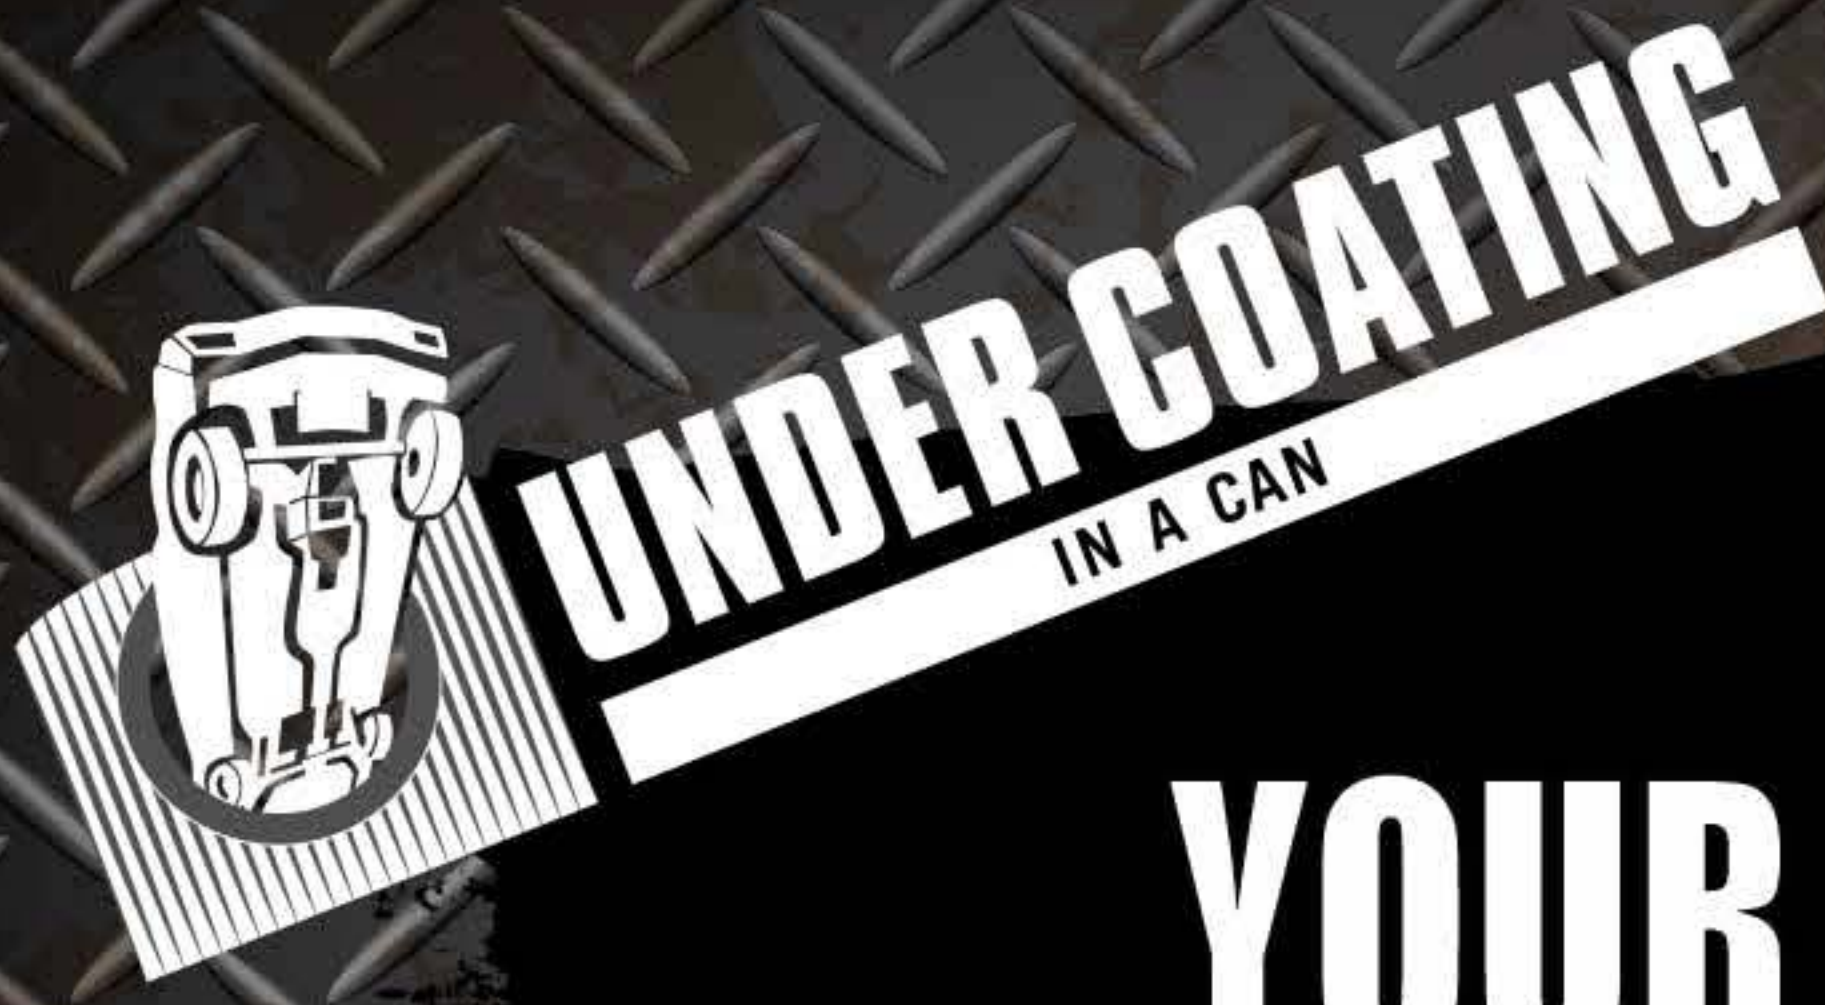

YOUR EASY GUIDE TO UNDERCOATING

① PREP.



Park on a flat surface and let the vehicle cool down completely. Use a pressure washer and wire brush to remove dirt, loose rust, grease, and grime

② DEGREASE.



Apply a quality degreaser (e.g., Purple Power or SprayNine), rinse thoroughly, and let dry for at least 24 hours to ensure proper undercoating adhesion

③ MASK.



Mask brake calipers, exhaust, sensors, and steering components to avoid coating hot or functional areas

④ SPRAY.



Mix or shake well before application, then apply an even coat. Allow it to cure per product directions. This seals out salt, water, and corrosion for the winter

⑤ MEASURE.



Use the Wet Film Thickness Gauge to test coating depth. Make sure your application hits the right mil thickness for maximum protection.